

Model: AKB3518E400

The diagram illustrates the contents of the package. It includes a person using a laptop, a pair of headphones, a USB cable (A), a USB cable (B), an optional USB adapter, and a carrying case.

EN: Full dry off the USB port before charging.
ZH: 充电前将 USB 端口完全擦干。
DE: Trocknen Sie den USB-Anschluss vor dem laden vollständig ab.
ES: Secche completamente el puerto USB antes de cargarlo.
IT: Asciugare completamente la porta USB prima della ricarica.
FR: Séchez complètement le port USB avant de charger.
KO: 충전하기 전에 USB 포트를 완전히 건조시키십시오.
JA: 充電する前に、USBポートを完全に乾燥させてください。

EN: Press and hold the power button for 3 seconds to power on/off

ZH: 按住电源按钮 3 秒可打开/关闭电源。

DE: Halten Sie zum Ein-/Ausschalten die Ein-/Aus-Taste 3 Sekunden lang gedrückt.

ES: Mantenga presionado el botón de encendido durante 3 segundos para encender/apagar.

IT: Tenere premuto il pulsante di accensione per 3 secondi per accendere/spegnere.

FR: Appuyez et maintenez enfoncé le bouton d'alimentation pendant 3 secondes pour allumer/éteindre.

JP: 電源ボタンを 3 秒間押し続けること、電源がオン/オフになります。

KO: 전원 버튼을 3초간 길게 눌러 전원을 켜거나 끕니다.

This diagram illustrates the Bluetooth pairing process. It shows a hand pressing the power button on the device, indicated by a power icon and a 5s timer. The device is shown with a Bluetooth symbol and a list of nearby devices. A smartphone screen displays the Bluetooth settings, showing 'Y8/Y8Pro' as a paired device.

EN: When power off, Press and hold the power button for 5 seconds until LED flashing red and blue to enter pairing mode.

ZH: 关机状态下, 按住电源按钮5秒直至LED 呈红蓝灯闪烁, 进入配对模式。

DE: Halten Sie im ausgeschalteten Zustand die Ein-/Aus-Taste 5 Sekunden lang gedrückt, bis die LED rot und blau blinkt, um in den Kopplungsmodus zu gelangen.

ES: Cuando se apague, mantenga presionado el botón de encendido durante 5 segundos hasta que el LED parpadee en rojo y azul para ingresar al modo de emparejamiento.

IT: Quando è spento, premere e tenere premuto il pulsante di accensione per 5 secondi finché il LED non lampeggia in rosso e blu per accedere alla modalità di associazione.

FR: Lorsque l'appareil est éteint, maintenez enfoncé le bouton d'alimentation pendant 5 secondes jusqu'à ce que la LED clignote en rouge et bleu pour entrer en mode d'appairage.

JP: 電源が切れたら、LEDが赤と青に点滅するまで電源ボタンを5秒間押し続けて、ペアリングモードに入ります。

KO: 전원이 꺼지면 LED가 빨간색과 파란색으로 깜박일 때까지 전원 버튼을 5초 동안 누르고 있으면 페어링 모드로 들어갑니다.

EN: Press the ANC button to switch ANC (Active Noise Cancellation)
ON/TRANSPARENCY/ANC OFF mode. Press and hold for 2 seconds to switch
ANC (Active Noise Cancellation) ON/ANC OFF mode.

ZH: 短按 ANC 按钮可切换 ANC (主动降噪) 开启/通透/ANC 关闭模式。按住 2 秒可切换
ANC (主动降噪) 开启/ANC 关闭模式。

DE: Drücken Sie die ANC-Taste, um den Modus ANC (Aktive Geräuschunterdrückung)
EIN/TRANSPARENZ/ANC AUS zu schalten. Halten Sie die Taste 2 Sekunden lang
gedrückt, um den Modus ANC (Aktive Geräuschunterdrückung) EIN/ANC AUS
zu schalten.

ES: Presione el botón ANC para cambiar el modo ANC (cancelación activa de
ruido) ON/TRANSPARENCIA/ANC OFF. Mantenga presionado durante 2 segundos
para cambiar el modo ANC (cancelación activa de ruido) ON/ANC OFF.

IT: Premere il pulsante ANC per attivare la modalità ANC (cancellazione
attiva del rumore) ON/TRANSPARENCY/ANC OFF. Tenere premuto per 2 secondi
per attivare la modalità ANC (cancellazione attiva del rumore) ON/ANC OFF.

FR: Appuyez sur le bouton ANC pour activer le mode ANC (annulation active de
bruit) ON/TRANSPARENCY/ANC OFF. Appuyez et maintenez enfoncé pendant
2 secondes pour activer le mode ANC (annulation active de bruit) /ANC OFF.

JP: ANC ボタンを押すと、ANC(アクティブノイズキャンセリング)のモード/透声/ANC オフ
モードが切り替わります。2 秒間長押しすると、ANC(アクティブノイズキャンセリング)
モード/ANC オフモードが切り替わります。

EN: ANC buttons will turn ANC (Active Noise Cancellation) ON/TRANSPARENCY/ANC OFF mode
alternately. 2 short presses will turn ANC (Active Noise Cancellation) ON/ANC OFF mode
alternately. 2 long presses will turn ANC (Active Noise Cancellation) ON/ANC OFF mode
alternately.

EN: x1: Press once
 ㉠ 1s: Press and hold for 1 second
 ZH: x1: 按一次
 ㉠ 1s: 按住1秒
 DE: x1: Einmal drücken
 ㉠ 1s: 1 Sekunde lang gedrückt halten
 ES: x1: Presione una vez
 ㉠ 1s: Mantenga presionado durante 1 segundo
 IT: x1: premere una volta
 ㉠ 1s: tenere premuto per 1 secondo
 FR: x1: Appuyez une fois
 ㉠ 1s : appuyez et maintenez enfoncé pendant 1 seconde
 JP: x1: 1回押す
 ㉠ 1s: 1秒間長押し
 KO: x1: 한 번 누르기
 ㉠ 1초: 1초 동안 길게 누르기

Microphone Mute

EN: Quickly triple-**tap** the ANC button to switch microphone mute.

ZH: 快速连按三次 ANC 按钮可切换麦克风静音。

DE: Tippen Sie dreimal schnell auf die ANC-Taste, um das Mikrofon stummzuschalten.

ES: Pulse tres veces rápidamente el botón ANC para silenciar el micrófono.

IT: Tocca rapidamente tre volte il pulsante ANC per disattivare il microfono.

FR: Appuyez rapidement trois fois sur le bouton ANC pour désactiver le microphone.

JP: ANC ボタンをすばやく 3 回タップして、マイクのミュートを切り替えます。

KO: 마이크 음소거를 전환하려면 ANC 버튼을 빠르게 세 번 누릅니다.

A diagram illustrating the connection of an external audio source to the camera's L input. On the left, a rectangular box with a blue musical note icon represents the audio source. A blue cable with a 3.5mm jack is plugged into the bottom of this box. The cable extends to the right and is plugged into the 'L' input port of the camera. The camera is shown from a top-down perspective, with its lens and various controls visible. The 'L' input is labeled with a circled 'L'.

EN: Play audio on an external devices by plugging in 3.5mm AUX cable.
*Wired mode will not be available when the headphones is turned off with a low battery.

ZH: 通过附赠的 3.5 毫米 AUX 线即可播放外部设备音频。
*当耳机因电量不足而无法开机时，有线模式将不可用。

DE: Spielen Sie Audio auf externen Geräten ab, indem Sie ein 3,5-mm-AUX-Kabel anschließen.

*Der kabelgebundene Modus ist nicht verfügbar, wenn der Kopfhörer ohne geladene Batterie ausgeschaltet ist.

ES: Reproducir audio en dispositivos externos conectando un cable AUX de 3,5 mm.

*El modo con cable no estará disponible cuando el auricular está apagado con la batería baja.

IT: Riprodurre audio su un dispositivo esterno collegando il cavo AUX da 3,5 mm.

*La modalità cabolata non è disponibile quando le cuffie sono spente con la batteria scarica.

FR: Jouez de l'audio sur un appareil externe en branchant un câble AUX de 3,5 mm.

*Le mode filaire n'est pas disponible lorsque l'oreillette est éteinte alors que la batterie est faible.

JP: 3.5mm AUX ケーブルを接続して、外部デバイスでオーディオを再生します。
*バッテリー残量が少ない状態でヘッドセットの電源を切ると、有線モードは使用できません。

KO: 3.5mm AUX 케이블을 연결하여 외부 장치에서 오디오를 재생합니다.
*배터리가 부족하여 헤드셋이 꺼져 있으면 유선 모드를 사용할 수 없습니다.

EN: Press the volume + and volume - button simultaneously for 5 seconds to reset the headphones.

ZH: 同时按住音量 + 和音量 - 按钮 5 秒钟以重置耳机。

DE: Drücken Sie gleichzeitig 5 Sekunden lang die Tasten „Lautstärke +“ und „Lautstärke -“, um den Kopfhörer zurückzusetzen.

ES: Presione el botón de volumen + y volumen - simultáneamente durante 5 segundos para reiniciar el auricular.

IT: Premere contemporaneamente i pulsanti volume + e volume - per 5 secondi per ripristinare l'auricolare.

FR: Appuyez simultanément sur les boutons volume + et volume - pendant 5 secondes pour réinitialiser le casque.

JP: ヘッドセットをリセットするには、音量 + ボタンと音量 - ボタンを同時に 5 秒間押します。

KO: 헤드셋을 재설정하려면 볼륨 + 및 볼륨 - 버튼을 동시에 5 초 동안 누릅니다.

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

In accordance with Article 10(2) and Article 10(10), this product is allowed to be used in all EU member states.

Warranty service is limited to normal use. Any man-made damages such as from connecting to an unsuitable power source, using an unsuitable device, or not following the instructions, as well as damages that did not occur during shipping, repairs, and adjustments not approved by the company, damages from misuse, inattention, or improper installation may cause the warranty to be ineffective immediately. This warranty does not include shipping fees.

 Always dispose of the used appliance at a recycling centre.
 Do not dispose the used appliance together with household waste.

EU	REP	eVatmaster Consulting GmbH Bettinastr. 30 60325 Frankfurt am Main, Germany contact@evatmaster.com
----	-----	--

We simply act as EU representative for cross-border sellers, and are not manufacturers/importers/distributors for the product, nor involved in the manufacture/import/sale of the product. Therefore, we are not responsible for any after-sales services related to the product. In case of any product quality or infringement issues, the manufacturer/importer/seller shall be solely held responsible

Operator: Ankbit International Limited
Address: 45-51 Chatham Road South, Tsim Sha Tsui, Kowloon, Hong Kong
Manufacturer: ShenZhen Ankbit Electronics Limited
Address: Runfeng Industrial Park, No. 4197 Baoan Blvd, Xixiang St., Baoan Dist., Shenzhen, China

CC ID: 2AUFR-RT952
C: 29252-AKB3518E500
VIN: AKB3518E400



219 - 238016

MADE IN CHINA

项目名称	RT953J1	备注	
物料名称	RT953J1说明书	版本	No.:1.0
物料编号	07.69R953010	制作	Winson
物料尺寸	97*120mm	日期	2024/04/24